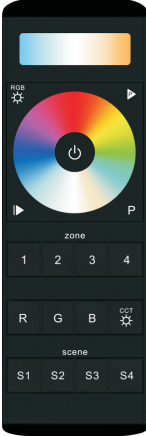 

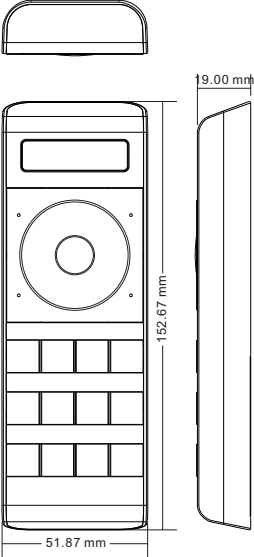 


RGB+Dual Color RF Wireless LED Dimmer

09.28584.04342



- 4 zones/areas
- Press-button RGB+CCT controller

Picture	Brief introduction of buttons				
	 <p>RGB brightness dimming button. Hold finger down: dimming up/ dimming down of RGB colors.</p> <p>Turn on/off</p> <p>Speed up/down</p> <p>4 zones: click the zone button to turn on/off the corresponding zone, hold to turn up/down the zone's brightness</p> <p>Save button: hold to save color/modes, click to call up the saved. Each zone can save up to 4 colors/modes</p> <p>Touch the slide to switch on the dual color LED lighting ,and choose the color temperature.</p> <p>Click to recall the program by 4 different running mode:jump,flash,fade,stroke</p> <p>Touch color wheel to get any color</p> <p>Program setting button: click the button, LED lighting connected on receiver will flashes one time, then touch the color wheel to choose 2-5 kinds of colors(max 5 colors), then click P button again, LED lighting connected on receiver will flash one time. So it means program finished. Press ▶ button to run the program.</p> <p>RGB buttons:click to turn on/off red , green, blue channel. hold to turn up/ down the brightness.</p> <p>W button is for dimming brightness of CCT dual color. Hold finger down: dimming up/ dimming down.</p>				
<table border="1"> <tr> <td>Operation Voltage</td> <td>Operation Frequency</td> </tr> <tr> <td>4.5V</td> <td>868MHz</td> </tr> </table>	Operation Voltage	Operation Frequency	4.5V	868MHz	<p>Note : This remote controls 4 zones (areas) receiver, each zone can pair with countless receivers. 1 receiver can be paired by max 8 different remote controls.</p>
Operation Voltage	Operation Frequency				
4.5V	868MHz				
Size	Operation				
	<ol style="list-style-type: none"> 1. Pair with RF receivers: <pre> graph LR A[Turn on RF remote] --> B[Click "Learning Key" on RF receiver] B --> C[Click a zone number on RF remote] C --> D[touch color wheel on RF remote, led lights flicker twice means well paired] </pre> 2. Play the remote after pairing: <pre> graph LR A[Turn on RF remote] --> B[Click the paired zone number/numbers] B --> C[touch color wheel or other buttons to do the controlling.] </pre> 3. Save color/scene: <pre> graph LR A[Turn on RF remote] --> B[Click the paired zone number/numbers] B --> C[select a color] C --> D[Hold S1/S2/S3/S4 until light flash twice] </pre> 5. Call up the saved: Select zone button which we want to called up , then click save button S1,S2,S3,S4. 6. How to delete the pairing: Power on the RF receiver, hold the "Learning Key" over 3 seconds until connected led lights flicker twice means well deleted. 				