
RF+Bluetooth Mini Portable DIM Remote


₿ Bluetooth° C € F € P RoHS COMPLIANT

Important: Read All Instructions Prior to Installation

Function introduction

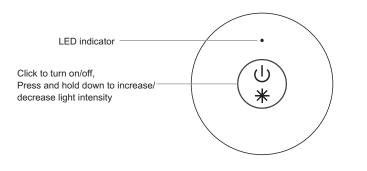



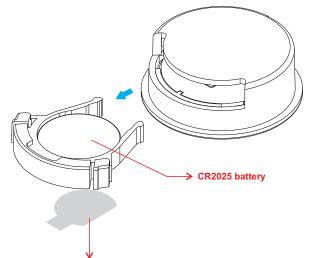

Note:Before the first use, please remove the protective film on the battery.

Back side

Safety & Warnings

This device contains a button lithium battery that shall be stored and disposed properly.

• DO NOT expose the device to moisture.

ProtocolRF+Bluetooth MeshOperation Voltage3VDC (CR2025)Transmission Frequency2.4GHzTransmission Range (free field)30mDimming Range0.1%-100%

Dimension	Φ 38. 5x14.8mm
Protection Grade	IP20

• RF+Bluetooth mini portable DIM remote control

• DIM remote control to control 1 zone of receivers

• Easy & quick pairing to the RF+Bluetooth receivers by simply pushing the buttons

• Mesh network for further control distance, receivers can transmit signal to each other

- · Each remote can control numerous receivers
- Each receiver can be paired to max. 8 remote controls
- The controlled receiver status can be quickly synchronized to the smart APP
- Transmission range between every two neighbor devices up to 30m
- Bluetooth low power consumption technology, long battery life

Pair with RF+Bluetooth receiver

Step 1: Do wiring the receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.



70010146

Product Data



Step 2: Click the "Prog" button or "Reset" button on the receiver to set it into pairing status

Step 3: Click ${\rm \dot{\odot}}$ button, LED lights connected with the receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

Install the remote control on the wall

1.Fix the magnet in the chute of the back shell 2.Screw the back cover onto the wall

3. The back cover can suck the remote control on the wall.

