


# MANUAL - KIT 02

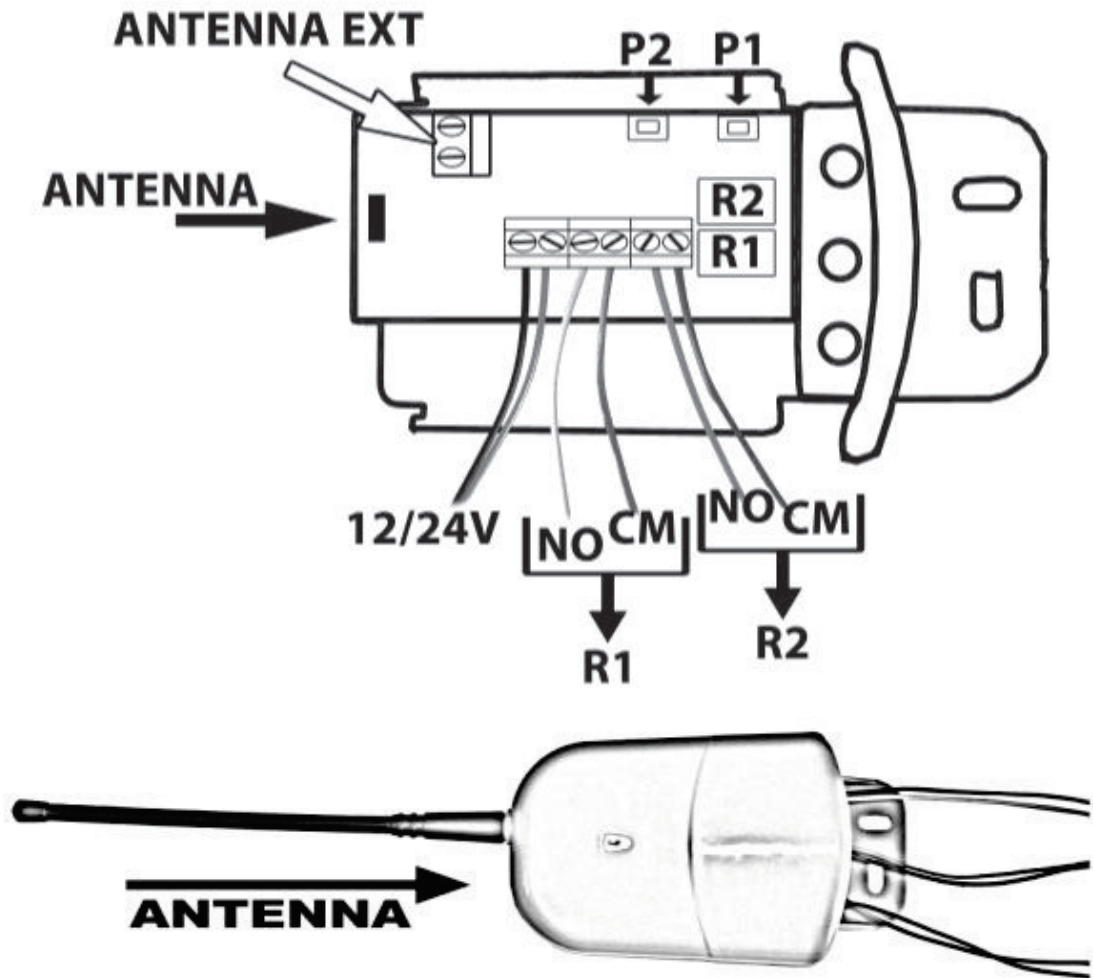

## **PROGRAMMING:**

Press the **P1**:

- 1 time to program **R1** in monostable mode
- 2 times to program **R2** in monostable mode
- 3 times to program **R1** in bistable mode
- 4 times to program **R2** in bistable mode

hold down the key of the radio remote control that you would like to acquire until the led blinks.

## **ERASING:**

*There are two ways of erasing*

### **1. Erasing a single code:**

Press **P2** for about two seconds (release the key); the LED will light up, press the key on the radio remote control that you want to delete.

### **2. Erasing all codes acquire:**

Press **P2** until the LED turns on (about 8 seconds).