

Tinka šiem modeliem:

Toshiba Satellite 200, 300, 400 Series:

200 / 205 / 210 / 215 / 220 / 225 / 230 / 235 / 250 / 300 / 305 / 310 / 315 / 320 / 325 / 335 /
200CDS / 200CDT / 200CS / 200CT / 205CD / 205CDS / 210CD / 210CDS / 210CDT / 210CS /
210CT / 215CD / 215CDS / 215CS / 220CDS / 220CS / 220CT / 225CDS / 230CDS / 230CX /
235CDS / 300CDS / 300CDS/2 / 300CDT / 305CDS / 305CDS/2 / 305CDT / 310CDS / 310CDS/2 /
310CDT / 310CDT/2 / 315CD / 315CDS / 315CDS/2 / 315CDT / 315CDT/2 / 320CDS / 320CDT /
320CT / 325CDS / 325CDT / 330CDS / 330CDT / 335CDS / 335CDT / 440 / 470 / 400CDT / 400CS
/ 405CS / 410CDT / 410CS / 415CE / 415CS / 420CDS / 420CDT / 4220XCDT / 4220XCDT-NT /
425CDS / 425CDT / 4260DVD / 4260XDVD / 4270CDS / 4270XDVD / 4270ZDVD / 4280DVD /
4280XDVD / 4280ZDVD / 430CDS / 430CDT / 430CDX / 435CDS / 435CDT / 440CDS / 440CDT /
440CDX / 440CS / 440CT / 445CDS / 445CDT / 445CDX / 450CDT / 450CDX / 460CDT / 460CDX /
465CDT / 465CDX / 470CDT / 480CDT / 480CDX / 485CDT / 485CDX / 490CDT / 490CDT-NT /
490CDX / 490XCDT / 490XCDT-NT / 495CDT / 495CDX

Toshiba Satellite 1400, 1415, 1500 Series:

1400 / 1405 / 1410 / 1415 / 1500 / 1555 / 1400-103 / 1400-153E / 1400-253S / 1400-303 / 1400-503
/ 1400-553S / 1400-604 / 1400-D07 / 1400-S151 / 1400-S152 / 1405-S151 / 1405-S152 / 1405-S171
/ 1405-S172 / 1410-1415 / 1410-303 / 1410-304 / 1410-401 / 1410-604 / 1410-704 / 1410-801 / 1410-
814 / 1410-S102 / 1410-S103 / 1410-S105 / 1410-S106 / 1410-S173 / 1410-S174 / 1410-S203 / 1410-
SP173 / 1415-S105 / 1415-S106 / 1415-S115 / 1415-S173 / 1415-S174 / 1415-SP173 / 1555CDS

Toshiba Satellite 1800 Series:

1800 / 1805 / 1870 / 1800-100 / 1800-200 / 1800-204 / 1800-254S / 1800-303 / 1800-314 / 1800-
354S / 1800-364 / 1800-364E / 1800-400 / 1800-412 / 1800-452E / 1800-4K1 / 1800-504 / 1800-
514 / 1800-554S / 1800-614 / 1800-654S / 1800-654SVF1 / 1800-700 / 1800-712 / 1800-750 /
1800-752S / 1800-804 / 1800-814 / 1800-911 / 1800-921 / 1800-A110 / 1800-A310 / 1800-A311 /
1800-A330 / 1800-A410 / 1800-A420 / 1800-A430 / 1800-A431 / 1800-HV9 / 1800-HVP / 1800-S100
/ 1800-S200 / 1800-S203 / 1800-S204 / 1800-S206 / 1800-S207 / 1800-S233 / 1800-S252 / 1800-
S253 / 1800-S254 / 1800-S256 / 1800-S274 / 1800-S314 / 1800-S400 / 1800-S700 / 1805-S154 /
1805-S177 / 1805-S203 / 1805-S204 / 1805-S207 / 1805-S208 / 1805-S253 / 1805-S254 / 1805-
S255 / 1805-S273 / 1805-S274 / 1805-S278 / 1830-S207 / 1830-S274

Toshiba Satellite 2000, 2100, 2200 Series:

2000 / 2010 / 2100 / 2115 / 2140 / 2180 / 2200 / 2060CDS / 2060CDT / 2065CDS / 2065CDT /
2100CDS / 2100CDT / 2100CDX / 2105CDS / 2105CDT / 2115CDS / 2140CDS / 2140CDT / 2140XCDS
/ 2180CDT / 2210CDS / 2210CDT / 2210XCDS / 2210XCDT / 2230CDS / 2250CDT / 2250XCDS /
2250XCDT

Toshiba Satellite 2400 Series:

2400 / 2405 / 2410 / 2415 / 2455 / 2400-A620 / 2400-S201 / 2400-S202 / 2400-S-251 / 2400-S-
252 / 2400-UJX / 2405-S201 / 2405-S202 / 2405-S221 / 2410-S203 / 2410-S204

Toshiba Satellite 2500, 2600, 2700 Series:

2500 / 2510 / 2515 / 2530 / 2535 / 2540 / 2545 / 2550 / 2590 / 2600 / 2615 / 2650 / 2655 / 2670
/ 2675 / 2695 / 2700 / 2770 / 2500-2515 / 2500CDS / 2500CDT / 2505CDS / 2505CDT / 2510CDS
/ 2510CDS/4 / 2515CDS / 2515CDS/4 / 2515CDT / 2515CTS / 2520CDS / 2520CDT / 2530CDS /
2530CDS/4 / 2535CDS / 2535CDS/4 / 2535CDT / 2540CDS / 2540CDS/4 / 2540CDT / 2540XCDT
/ 2545CDS / 2545CDS/4 / 2545CDT / 2545XCDT / 2545XCDT/4 / 2550CDS / 2550CDT / 2590CDS
/ 2590CDS/4 / 2590CDT / 2590CS / 2590XDVD / 2595CDS / 2595CDS/4 / 2595CDT / 2595XDVD /
2610CDT / 2610DVD / 2615DVD / 2650DVD / 2650XDVD / 2655XDVD / 2670DVD / 2675DVD /
2695DVD / 2710XDVD / 2715DVD / 2715XDVD / 2755DVD / 2755XDVD / 2770XDVD / 2775XDVD

Toshiba Satellite 2800 Series:

2800 / 2805 / 2900 / 2800-S201 / 2800-S202 / 2800-S210 / 2805-S201 / 2805-S202 / 2805-S301
/ 2805-S302 / 2805-S401 / 2805-S402 / 2805-S503 / 2805-S603

Toshiba Satellite 4000 Series:

4000 / 4005 / 4020 / 4060 / 4070 / 4080 / 4085 / 4090 / 4100 / 4200 / 4260 / 4270 / 4280 /
4300 / 4320 / 4340 / 4360 / 4400 / 4600 / 4000CDS / 4000CDS/4 / 4000CDT / 4000SCDS/4 /
4005CDS / 4005CDS/4 / 4005CDT / 4010CDS / 4010CDS/4 / 4010CDT / 4015CDS / 4015CDS/4 /

4015CDT / 4020CDT / 4020CDT/6 / 4025CDS / 4025CDT / 4025CDT/6 / 4030CDS / 4030CDT / 4030CDT/4 / 4030CDT-NT / 4035CDT / 4060CDT / 4060CDT/4 / 4060CDT-NT / 4060XCDT / 4070CDS / 4070CDT / 4080CDS / 4080CDT / 4080XCDT / 4080XCDT/6 / 4080XCDT-NT / 4085XCDT / 4090CDS / 4090CDT / 4090XCDT / 4090XDVD / 4090XDVD/6 / 4090XDVD-NT / 4100CDS / 4100CDT / 4100XCDT / 4100XCDT-NT / 4100XDVD / 4100XDVD/6 / 4100XDVD-NT / 4260DVD / 4270DVD / 4270XDVD / 4280XDVD / 4280ZDVD / 4320ZDVD / 4340ZDVD / 4360ZDVD / 4400CDT

Toshiba Satellite 5000 Series:

5000 / 5005 / 5000-104 / 5000-201 / 5000-204 / 5000-A540 / 5000-X / 5000-X1Z / 5000-X59 / 5000-Z59 / 5001-X / 5005-S503 / 5005-S504 / 5005-S507 / 5005-S508

Toshiba Satellite 5100 Series:

5100 / 5105 / 5110 / 5100-046 / 5100-201 / 5100-501 / 5100-503 / 5100-603 / 5100-A740 / 5100-A741 / 5100-A801 / 5100-A902 / 5100-S603 / 5100-S607 / 5105-S501 / 5105-S-501 / 5105-S502 / 5105-S607 / 5105-S608 / 5105-S701 / 5105-S702 / 5105-S90 / 5105-S901

Toshiba Satellite 5200 Series:

5200 / 5205 / 5200-00E / 5200-701 / 5200-702 / 5200-703 / 5200-711 / 5200-801 / 5200-802 / 5200-803 / 5200-901 / 5200-902 / 5200-903 / 5200-POE / 5200-S701 / 5205-S119 / 5205-S503 / 5205-S504 / 5205-S505 / 5205-S506 / 5205-S5151 / 5205-S703 / 5205-S704 / 5205-S705 / 5205-SP119 / 5205-SP505

Toshiba Satellite Pro 6000, 6100 Series:

6000 / 6050 / 6070 / 6100

Toshiba Satellite A10 Series:

A10 / A10-5WM / A10-A430 / A10-A431 / A10-C8M / A10-HVM / A10-REH / A10-S100 / A10-S1001 / A10-S103 / A10-S113 / A10-S127 / A10-S128 / A10-S129 / A10-S1291 / A10-S129-WiFi / A10-S167 / A10-S168 / A10-S169 / A10-S1691 / A10-S177 / A10-S178 / A10-S203 / A10-S213 / A10-S310 / A10-S403D / A10-S440 / A10-S503 / A10-S513 / A10-S703 / A10-SP127 / A10-SP177 / Small

Business Series

Toshiba Satellite A15 Series:

A15 / A15-S127 / A15-S1271 / A15-S128 / A15-S129 / A15-S1291 / A15-S1292 / A15-S151 / A15-S157 / A15-S158 / A15-S159 / A15-S1692 / A15-SP127 / A15-SP177

Toshiba Satellite A50, A55 Series:

A50 / A55-S106 / A55-S1063 / A55-S1064 / A55-S1065 / A55-S1066 / A55-S129 / A55-S1291 / A55-S179 / A55-S1791 / A55-S306 / A55-S3061 / A55-S3062 / A55-S3063 / A55-S326 / A55-S3261

Toshiba Satellite Pro M10, M15 Series:

M10 / M10-S405 / M10-S406 / M10-SP405 / M15 / M15-S405 / M15-S406

Toshiba Satellite M20, M25 Series:

M20 / M20-258 / M20-S257 / M20-S258 / M20-S610 / M25

Toshiba Satellite M30 Series:

M30 / M30 Small Business Series / M30 Special Edition / M30/00R00F / M30/D00F / M30/K00F / M30/R00F / M30-001 / M30-00K / M30-103 / M30-104 / M30-106 / M30-107 / M30-154 / M30-204 / M30-241 / M30-261 / M30-304 / M30-344 / M30-345 / M30-354 / M30-404 / M30-604 / M30-632 / M30-642 / M30-704 / M30-710 / M30-730 / M30-7301 / M30-7301B / M30-731 / M30-742 / M30-760 / M30-801 / M30-832 / M30-841 / M30-842 / M30-852 / M30-853 / M30-861 / M30-901 / M30-941 / M30-PM725B / M30-PM725G / M30-Q31 / M30-S309 / M30-S3091 / M30-S350 / M30-S3501 / M30-S3501

Small Business Series / M30-S350SB / M30-S725B / M30-S725G / M30-S730 / M30-S7301 / M30-S7301B / M30-S7302B / M30-S7302G / M30-S731 / M30-S734B / M30-S734G / M30-S735B / M30-S735G / M30-S760 / M30-S760B / M30-SP350 / M30-UU9 / M30-YSJ

Toshiba Satellite M35 Series:

M35 / M35-S309 / M35-S3091 / M35-S320 / M35-S3201 / M35-S359 / M35-S3591 / M35-S3592 / M35-S456 / M35-S4561 / M35-SP350 / M35-SP3501

Toshiba Satellite M40 Series:

M40 / M40(DDR2) / M40/037009 / M40/038009 / M40/03K009 / M40-JM3 / M40-JM8 / M40-P535 / M40-P5351 / M40-P545 / M40-S4111 / M40-S4111TD / M40-S4112 / M40-S4112TD / M40-S417 / M40-S4172 / M40-S4172TD / M40-S417TD / M40-S5181TD / M40-SF3 / M40-YP3

Toshiba Satellite M45 Series:

M45 / M45-S139 / M45-S139X / M45-S165X / M45-S265 / M45-S2651 / M45-S2652 / M45-S2653 / M45-S269 / M45-S2691 / M45-S2692 / M45-S2693 / M45-S331 / M45-S3311 / M45-S351 / M45-S3511 / M45-S355 / M45-S3551 / M45-S3552 / M45-S3553 / M45-S359 / M45-S3591 / M45-SP351 / M45-SP355

Toshiba Satellite M50 Series:

M50 / M50-101 / M50-105 / M50-106 / M50-109 / M50-115 / M50-122 / M50-126 / M50-130 / M50-137 / M50-138 / M50-141 / M50-142 / M50-143 / M50-156 / M50-157 / M50-159 / M50-161 / M50-180 / M50-181 / M50-182 / M50-MX2 / M50-MX5 / M50-P330 / M50-P340 / M50-P345 / M50-P3451 / M50-S418 / M50-S4182 / M50-S4182TD / M50-S418TD / M50-S5181 / M50-S5181TD / M50-S5181TQ / M50-S5182 / M50-S5182TD / M50-YK5

Toshiba Satellite M55 Series:

M55 / M55-3293 / M55-3294 / M55-S1001 / M55-S135 / M55-S1351 / M55-S1352 / M55-S139X / M55-S141 / M55-S2252 / M55-S2253 / M55-S321 / M55-S325 / M55-S3251 / M55-S3262 / M55-S329 / M55-S3291 / M55-S3292 / M55-S3293 / M55-S3294 / M55-S331 / M55-S3311 / M55-S3314 / M55-S3315 / M55-S351 / M55-S3511 / M55-S3512 / M55-SP325 / M55-SP3252

Toshiba Satellite M110, M115 Series:

M110-ST1161 / M115-S1061 / M115-S1064 / M115-S1071 / M115-S1074 / M115-S3094 / M115-S3104 / M115-S3144 / M115-S3154

Toshiba Satellite R10, R15, R20, R25 Series:

R10 / R10-S613 / R10-S802TD / R10-S804TD / R10-S820 / R15 / R15-S822 / R15-S8222 / R15-S829 / R20-ST2081 / R20-ST4113 / R25-S3503 / R25-S3513

Toshiba Satellite U Series:

U200-ST2091 / U205 / U205-S5002 / U205-S5021 / U205-S5022 / U205-S5034 / U205-S5044

Toshiba Tecra A1, A2, A3, A4, A5, A8 Series:

A1 / A2 / A2-S119 / A2-S139 / A2-S20ST / A2-S219 / A2-S239 / A2-S316 / A2-S336 / A2-S4372ST / A3 / A3-S611 / A3-S711 / A3-S731 / A3-S737TD / A4 / A4-S111TD / A4-S211 / A4-S216 / A4-S231 / A4-S236 / A4-S312TD / A4-S313 / A5 / A5-S116 / A5-S118 / A5-S136 / A5-S237 / A5-S239 / A5-S2391 / A5-S2392 / A5-S2393 / A5-S416 / A5-S516 / A5-S6215TD / A8-EZ8411 / A8-EZ8412 / A8-EZ8413 / A8-S8314 / A8-S8414 / A8-S8415 / A8-ST3612

Toshiba Tecra M Series:

M1 / M2 / M2-S319 / M2-S339 / M2-S410 / M2-S430 / M2-S519 / M2-S530 / M2-S539 / M2-S630 / M2-S730 / M2-S7302ST / M2V / M2VHOST / M2V-S310 / M2V-S330 / M2V-S3302ST / M3 / M3-S212TD / M3-S316 / M3-S331 / M3-S336 / M3-S636 / M4 / M4-S115TD / M4-S315 / M5 / M5-60 / M5-80 / M5-S433 / M6 / M7

Toshiba Tecra 8000, 8100, 8200, 9000, 9100 Series

Toshiba Tecra 500, 700 Series:

500 / 505 / 510 / 515 / 520 / 530 / 540 / 550 / 700 / 710 / 720 / 730 / 740 / 750 / 780 / 4600 / 500CDS / 500CDT / 500CS / 505CDS / 505CDT / 510CDS / 510CDT / 510CS / 515CDS / 515CDT / 520CDS / 520CDT / 530CDS / 530CDT / 540CDT / 550CDT / 700CD / 700CDT / 700CS / 700CT / 710CDT / 720CDT / 730CDT / 730XCDT / 731CDT / 740CDT / 740CDT-NT / 750CD / 750CDM / 750CDM-NT / 750CDS / 750CDT / 750DVD / 780CDM / 780CDM-NT / 780CDT / 780CDV / 780DMT / 780DVD

Toshiba Tecra S1, S2, S3, TE2000, TE2100, TE2200, TE2300 Series

Toshiba Portege 300, 600, 2000, 3500, 4000, 7000 Series:

610 / 620 / 650 / 660 / 2000 / 2010 / 3500 / 3505 / 4000 / 4005 / 4010 / 7000 / 7010 / 7020 / 7100 / 7200 / 300CT / 305CT / 310CT / 315CT / 320CT / 325CT / 330CT / 335CT / 3500 Tablet PC / 3505 Tablet PC / 4030CDS / 4030CDT / 4060CDT / 4070CDS / 4080CDT / 4090XDVD / 4100XDVD / 600CT / 610CT / 620CT / 650CT / 660CDT / 660CT / 7000CT / 7000CT-NT / 7010CT / 7015CT / 7020CT / 7020CT-NT / 7140CT / 7140CT-NT / 7200CT / 7200CTE / 7220CTE

Toshiba Portege M100, M200, M300, M400 Series:

M100 / M100 01Q57 / M100-101 / M100-106 / M100-112 / M200 / M200 0086E / M200 02QH1 / M200-101 / M200-102 / M200-106 / M200-122 / M200-152 / M200-170 / M200-171 / M200-172 / M200-173 / M200-19T114 / M200-19T294 / M200MA / M200-S218TD / M200-S838 / M205 / M205-S209 / M205-S809 / M205-S810 / M300 / M400 / M400-100 / M400-120 / M400-40 / M400-60 / M400-80 / M400-S4031 / M400-S933 / M405 / M405-100

Toshiba Portege R100, R200, R205, R400, R500 Series:

R100 / R200 / R200-110 / R200-113 / R200-P1101 / R200-P1111 / R200-S114 / R200-S2031 / R200-S2032 / R200-S214 / R200-S234 / R205 / R205-S2062 / R205-S209 / R2-S2062 / R400-S4831 / R400-S4832 / R400-S4833 / R400-S4834 / R400-S4835 / R400-S4931 / R400-S49311 / R400-S4933 / R500-S5001X / R500-S5002 / R500-S5002X / R500-S5003 / R500-S5004 / R500-S5005

Toshiba Portege S100 Series:

S100 / S100-112 / S100-113 / S100-P2301 / S100-P2451 / S100-S113 / S100-S1132 / S100-S1133 / S100-S113TD / S100-S213 / S100-S213TD / S105-S1133

TOSHIBA T Series:

T1800 / T1850 / T1850C / T1900 / T1900c / T1900s / T1910 / T1910cs / T1950 / T1950CS / T1950CT / T1960C / T1960CS / T1960CT / T200 / T200CS / T2100CDX / T2100CS / T2100CT / T2105CS / T2105CT / T2110CS / T2110CT / T2115CS / T2115CT / T2130CS / T2130CT / T2135CS / T2135CT / T2150CDS / T2150CDT / T2155 / T2400CS / T2400CT / T2450CT / T3400C / T3400CT / T3400CT/120 / T3600 / T3600C / T3600CT / T4500 / T4500C / T4600 / T4600C / T4700CS / T4700CT / T4800CT / T4850CT / T4900CT / T6000 / T6600C

Toshiba Libretto Series:

20CT / 30CT / 50CT / 60CT / 70CT / U100 / U100-S213 / U105