


LED PANEL INSTALLATION MANUAL




ATTENTION / NOTICE

Turn off the power before performing a check, installation, or removal.
Make proper electrical grounding.


Pending (Suspended)

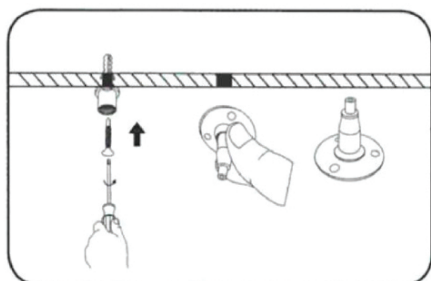


- ① Screw the round bases on the ceiling.

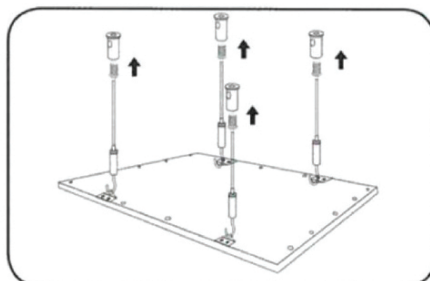


- ② Fasten the hooks on the handle of the clip.

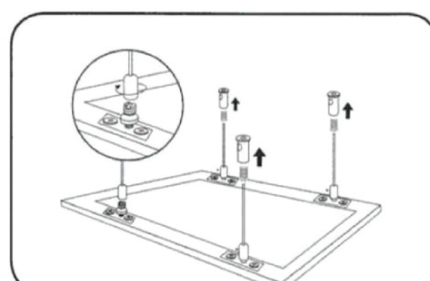


- ③ Screw the two screws faces in the frame. Tighten the nut to the side.

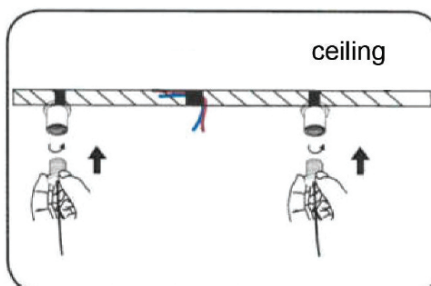

- ④ Screw the cable to the ceiling mount.

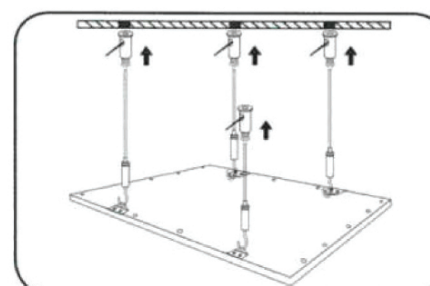


- ⑤ Attach the LED panel to the ceiling, and make final adjustments to the desired height.

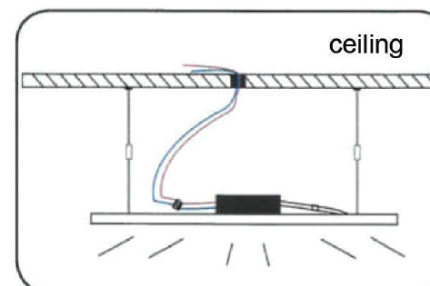


- ⑥ Connect the driver to the electrical network.


Built-in (supported on T-bar)

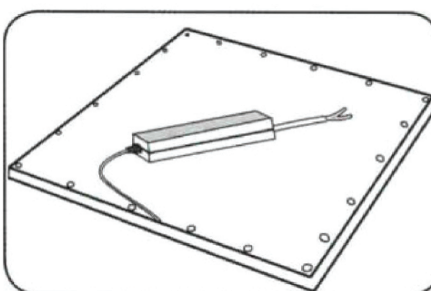


- ① Connect the driver to the LED and lean it on the back.

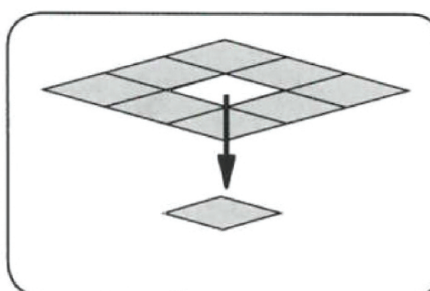


- ② Remove the ceiling plate from the plaster.

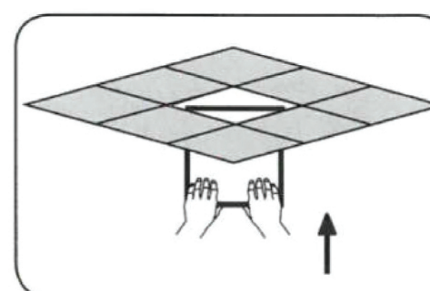


- ③ Place the LED panel on the ceiling grid.

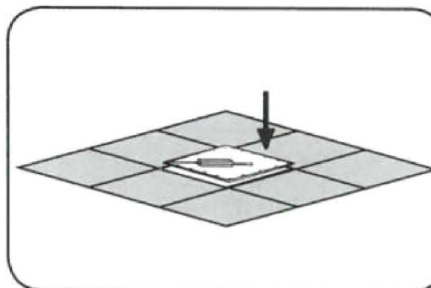



- ④ Make sure the LED panel is set properly inside the T bars of the ceiling.

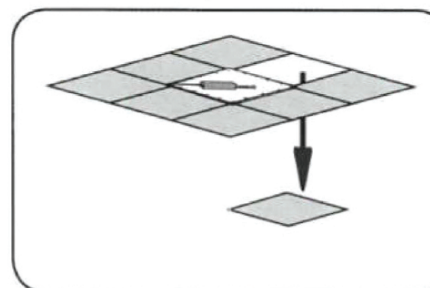

- ⑤ Remove a ceiling plate from the close to the LED panel.

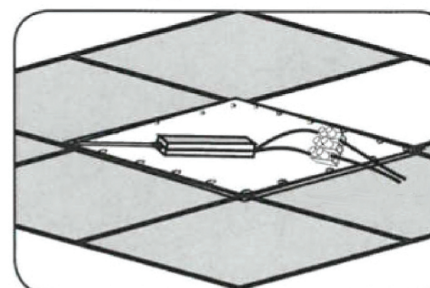


- ⑥ Make the electrical connection driver to the power network.

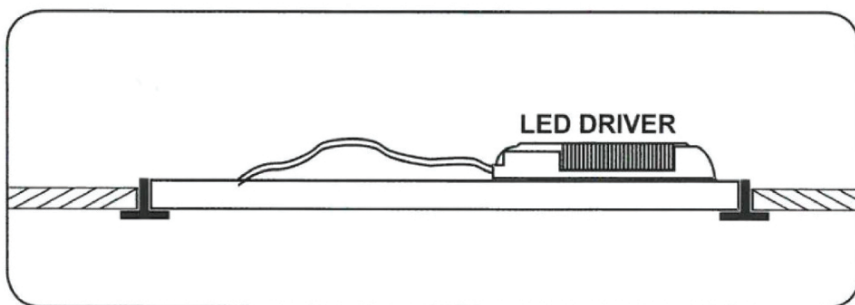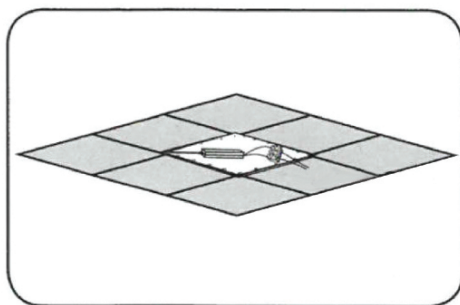


- ⑦ Replace the plasterboard to complete the installation.


Built-in lining (spring clip)

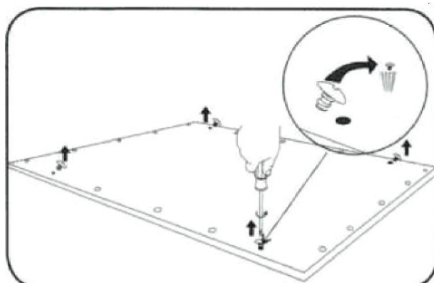


- ① Remove the screws from the position indicated in the picture.

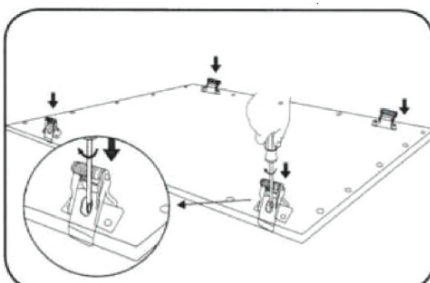


- ② Fasten the tabs to the same positions as the removed screws by screwing in the center.

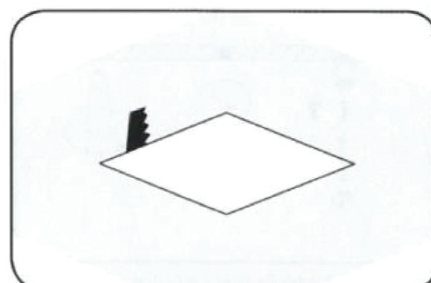

- ③ Make a cut in the ceiling according to the measures to be built.

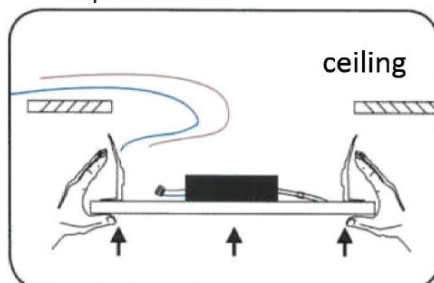


- ④ Wire the driver. With the tabs open, place the panel inside the ceiling.

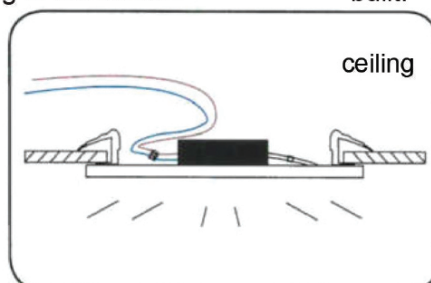


- ⑤ Grip loops gently until the panel fixes on the ceiling, completing the installation.


Supported overlay

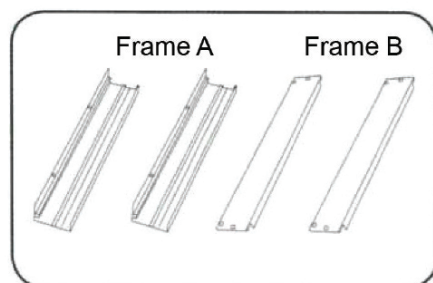


- ① Identify the two types of frame as shown above.

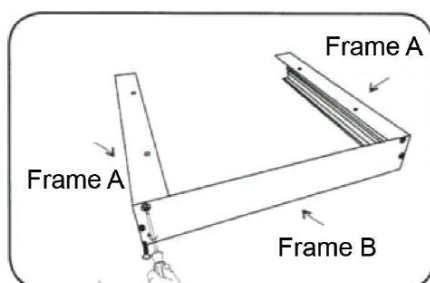


- ② Screw two frames "A" with a frame "B".

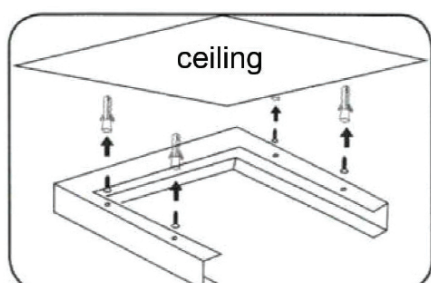


- ③ Screw the frame into the ceiling

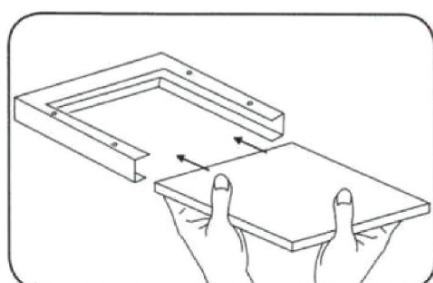

- ④ Attach the LED panel to the frame by sliding it.

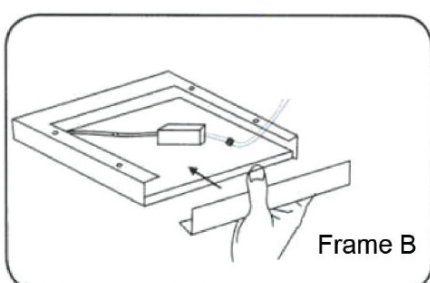

- ⑤ Screw the other frame "B" on the remaining side.

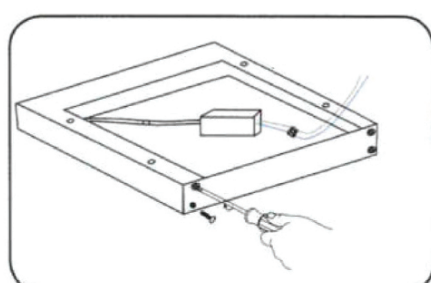

- ⑥ Finish the electrical installation and screw the frame.